


STANDARD DEPARTURE CHART -  
INSTRUMENT (SID) - ICAO

SANTA MARIA ( LPAZ )  
RWY 18

TRANSITION ALTITUDE 4000  
TWR 118.100  
APP 119.100  
TMA 132.150

BEKUN 3S, BEKUN 3T, DOKAS 3S, DOKAS 3T, ETROX 3S  
GINSU 3S, GOMOS 3S, RODIL 3S, VMG 3S, XUVAP 1S

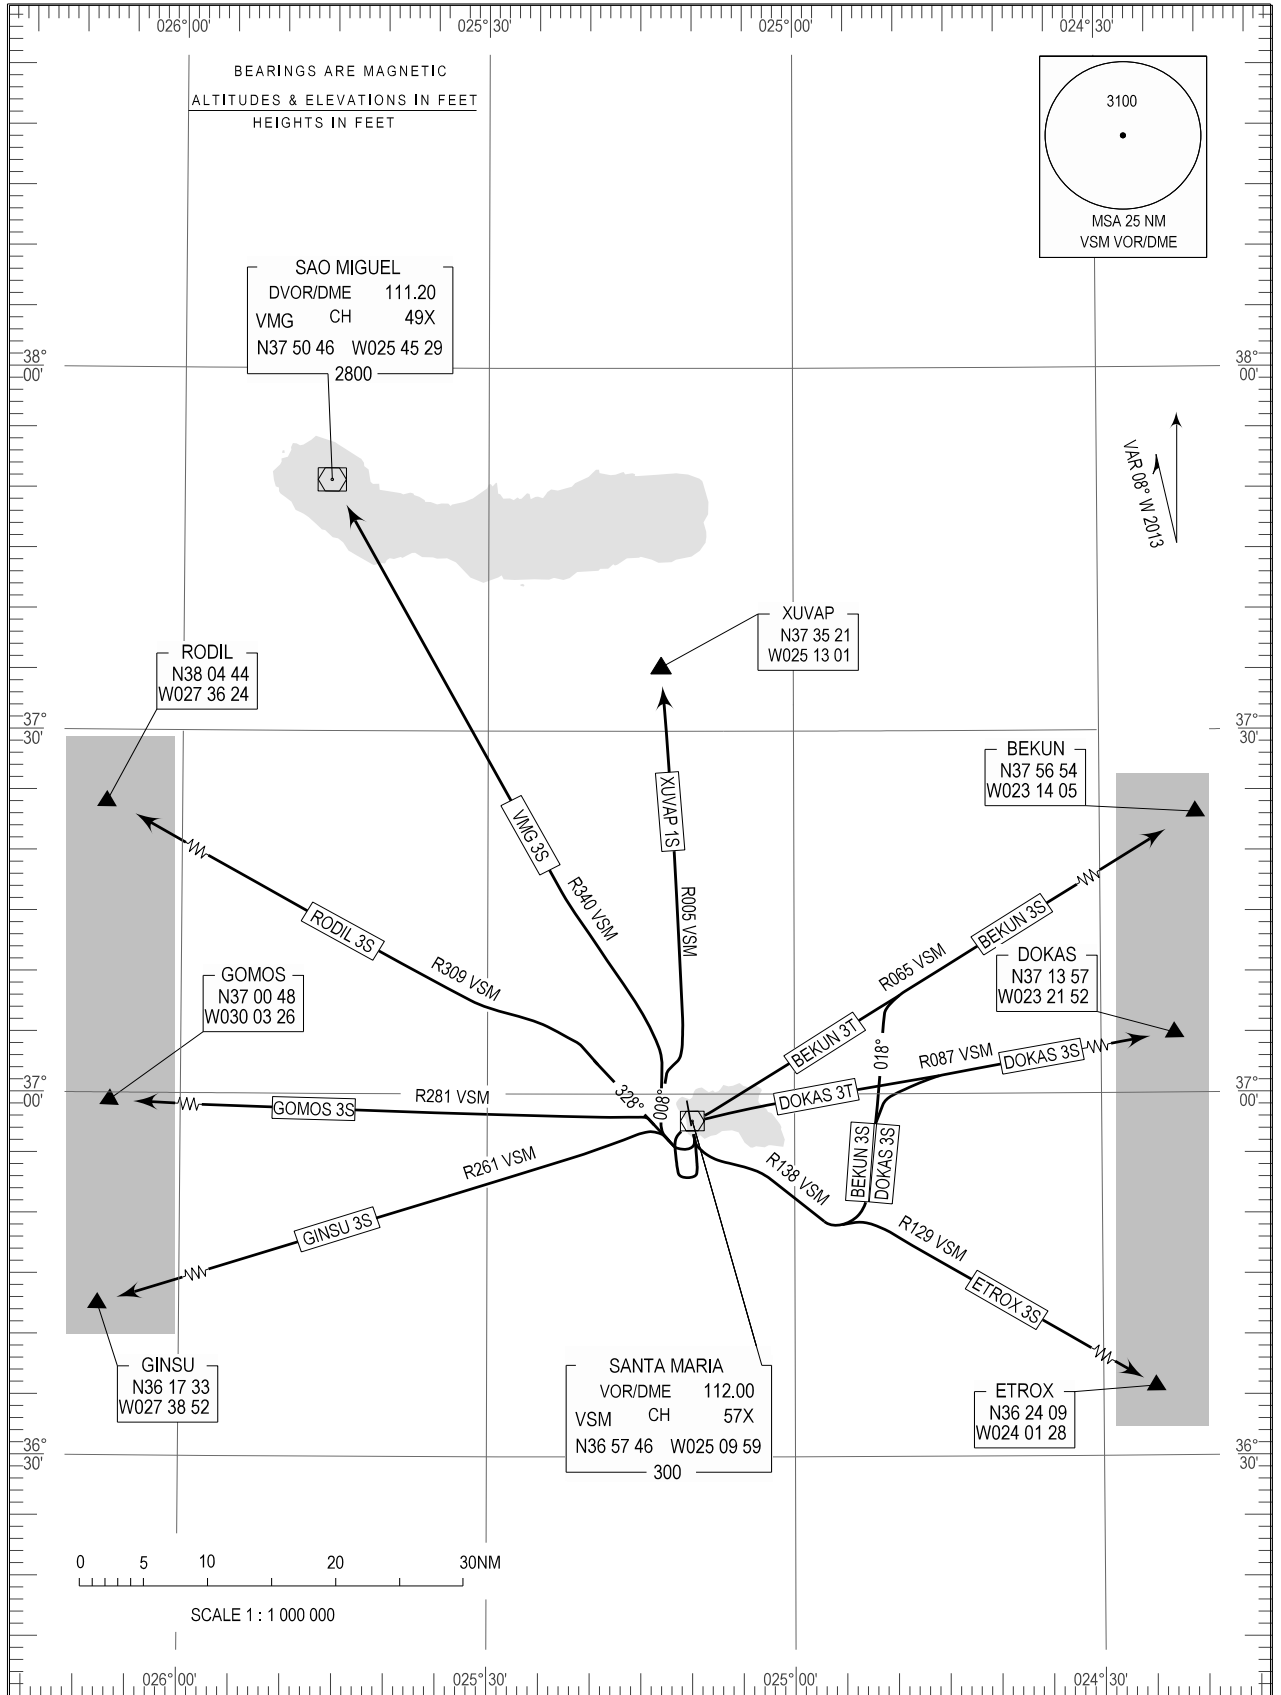

XUVAP1S new. NAVPO4S withdrawn.

**Santa Maria STANDARD INSTRUMENT DEPARTURE (SID) RWY 18**

RUNWAY 18		
Designator	Route	Remarks
BEKUN3S	Maintain takeoff heading until 1500 FT QNH, then turn left to intercept and proceed VSM RDL 138. At 3100 FT QNH climbing turn left to track 018 to intercept VSM RDL 065 to BEKUN	
BEKUN3T	Maintain take-off heading until 1500 FT QNH, then turn right to VSM VOR and proceed on VSM RDL 065 to BEKUN	Note- Cross VSM VOR at or above 3100 FT QNH climbing
DOKAS3S	Maintain take-off heading until 1500 FT QNH, then turn left to intercept and proceed VSM RDL 138. At 3100 FT QNH climbing turn left to track 018 to intercept VSM RDL 087 to DOKAS	
DOKAS3T	Maintain take-off heading until 1500 FT QNH, then turn right to VSM VOR and proceed on VSM RDL 087 to DOKAS	Note- Cross VSM VOR at or above 3100 FT QNH climbing
ETROX3S	Maintain take-off heading until 1500 FT QNH, then turn left to intercept VSM RDL 138. At 3100 FT QNH climbing turn left to intercept VSM RDL 129 to ETROX.	
GINSU3S	Turn right to track 328 to intercept VSM RDL 261 to GINSU	
GOMOS3S	Turn right to track 328 to intercept VSM RDL 281 to GOMOS	
NAVPO4S	Withdrawn	
RODIL3S	Turn right to track 328 to intercept VSM RDL 309 to RODIL	
VMG3S	Turn right to track 008 to intercept VSM RDL 340 to VMG	Note - Remain West of VSM RDL 009/189
XUVAP1S	Turn right to track 008. When crossing VSM RDL 328 turn right to intercept and proceed on VSM RDL 005 to XUVAP.	Note - Remain West of VSM RDL 009/189