


STANDARD DEPARTURE CHART -  
INSTRUMENT (SID) - ICAO

SANTA MARIA ( LPAZ )  
RWY 36

TRANSITION ALTITUDE  
4000

TWR 118.100  
APP 119.100  
TMA 132.150

BEKUN 4N, DOKAS 4N, DOKAS 3P, ETROX 3N, GINSU 4N  
GOMOS 4N, RODIL 3N, VMG 4N, XUVAP 1N

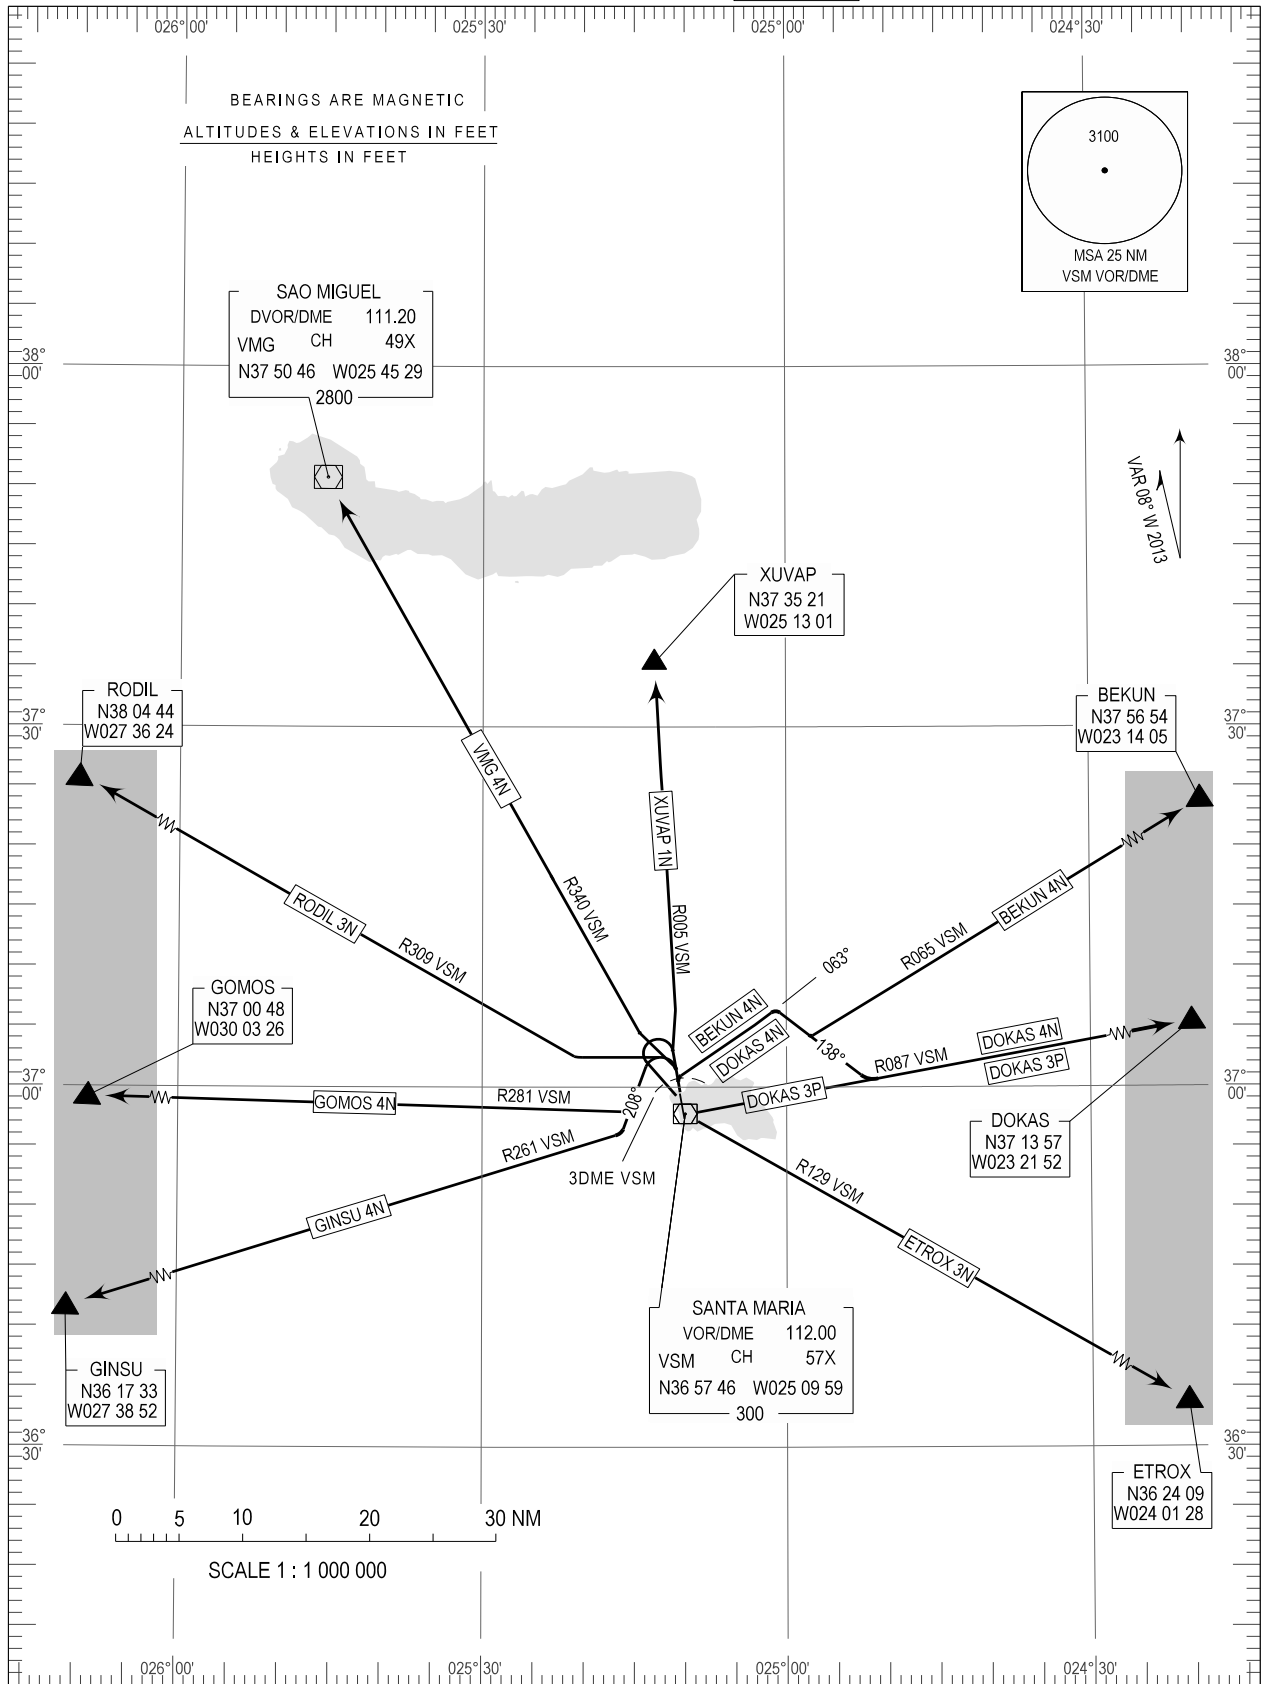

XUVAP1N new. NAVPO4N withdrawn.

**Santa Maria STANDARD INSTRUMENT DEPARTURE (SID) RWY 36**

RUNWAY 36		
Designator	Route	Remarks
BEKUN4N	Maintain take-off heading; at DME 3 VSM turn right to track 063; at 3100FT QNH turn right to track 138 to intercept VSM RDL 065 to BEKUN.	
DOKAS4N	Maintain take-off heading; at DME 3 VSM turn right to track 063; at 3100FT QNH turn right to track 138 to intercept VSM RDL 087 to DOKAS.	
DOKAS3P	Maintain take-off heading until 1500 FT QNH, then turn left to VSM VOR and proceed on VSM RDL 087 to DOKAS	Note- Cross VSM VOR at or above 3100 FT QNH, climbing
ETROX3N	Maintain take-off heading until 1500 FT QNH then turn left to VSM VOR and proceed on VSM RDL 129 to ETROX	Note- Cross VSM VOR at or above 3100 FT QNH, climbing
GINSU4N	Maintain take-off heading until 1500 FT QNH, then turn left to track 208 to intercept VSM RDL 261 to GINSU.	
GOMOS4N	Maintain take-off heading until 1500 FT QNH, then turn left to track 208 to intercept VSM RDL 281 to GOMOS.	
NAVPO4N	Withdrawn	
RODIL3N	Maintain take-off heading until 1500 FT QNH, then turn left to intercept VSM RDL 309 to RODIL	
VMG4N	Maintain take-off heading until 1500 FT QNH, then turn left to intercept VSM RDL 340 to VMG.	
XUVAP1N	Intercept and proceed on VSM RDL 005 to XUVAP.	